


SWAG V4.0 "TRADESMAN" Installation Instructions

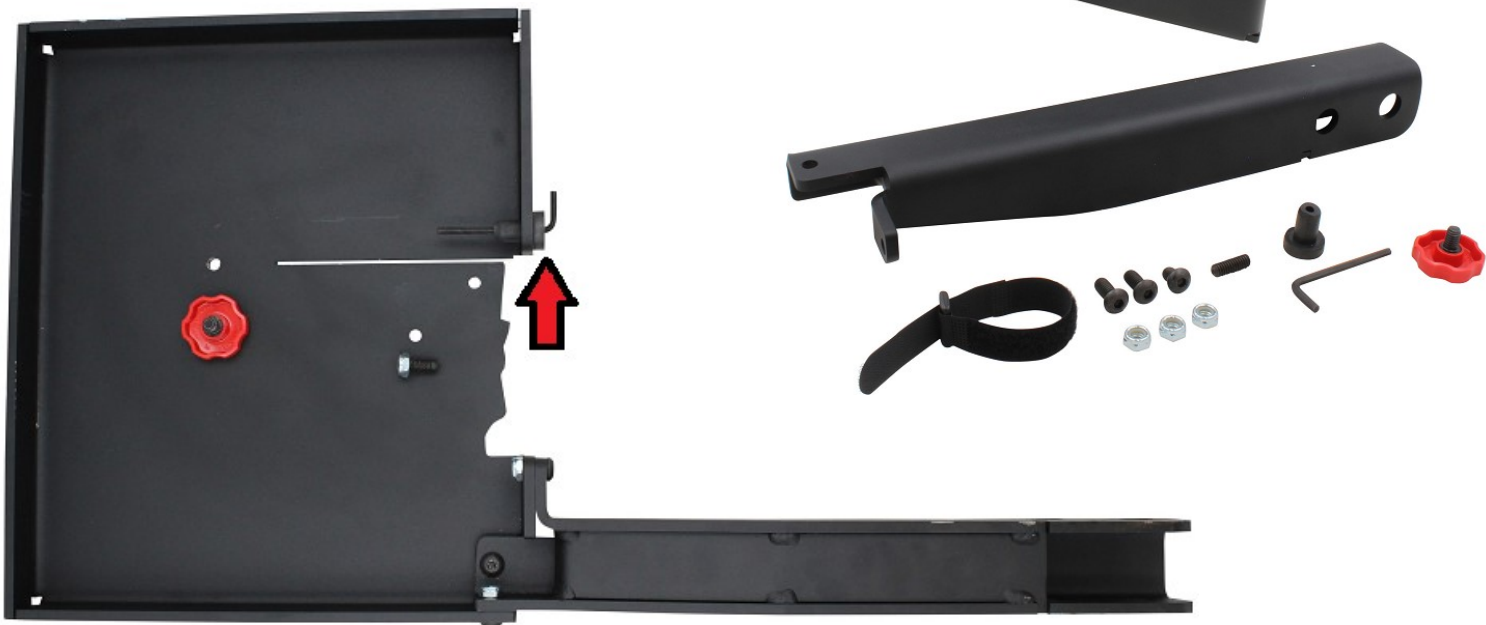

1) Install Receiver Tube:

Attach the receiver tube using the supplied 5/16" bolts and nuts as shown below. Then install the rubber push in grommet as indicated by the red arrow below. You will need to cut the pointed tip off the end of the grommet to insert the 5/32" allen wrench. This is where the wrench will be stored when not in use.



2) Hardware Assembly:

Using the supplied 5/32" hex key and a 1/2" wrench, install the 5/16" jam nut so it is flush with the bottom of the 5/16" set screw.




3) Set Screw Installation:

Install the 7/8" long set screw from the bottom of the table so the top of the fastener protrudes through the top of the table ~3/16".



4) Blade Guard:

Push the button on the side of the blade guard (red arrow shown below) to extend the guard in the farthest outward position as shown in the 2nd picture below.

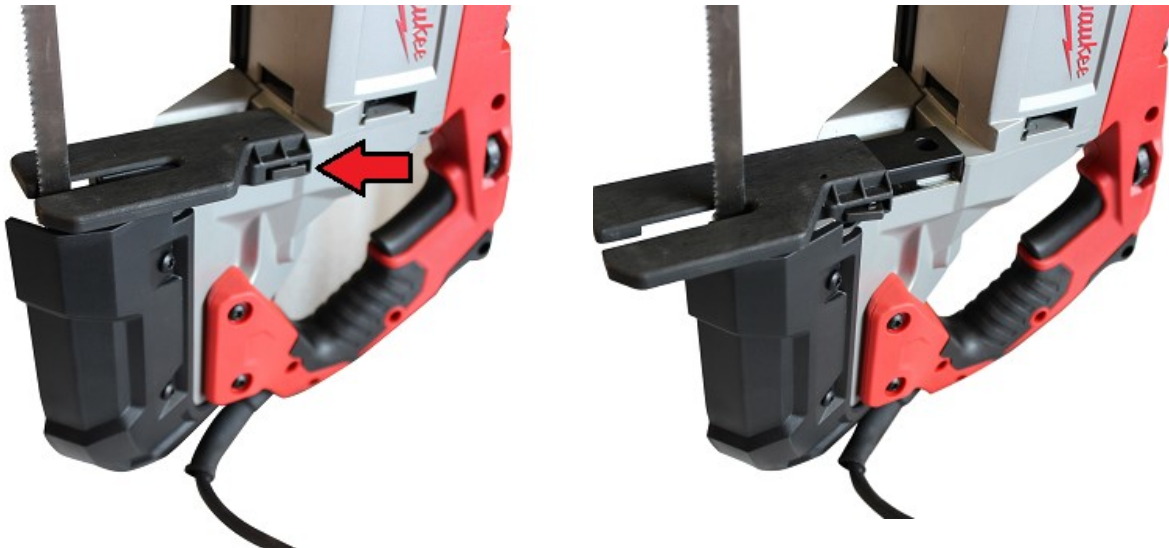

5) Saw Installation:

Install the saw into the portaband table, so the table slides into the air vent of the saw. Then install the provided red thumb knob. Hand tighten the thumb knob from the bottom of the table so it goes through the middle of the blade guard fork.



6) Blade Alignment:

Using the supplied 5/32" hex key, tighten the set screw down until the blade is perpendicular to the top working surface of the portaband table.

Note: If the set screw sticks up past the top of the table, it will need to be removed then the bottom of screw will need to be ground down and reinstalled.



7) Trigger Control:

We recommend using the included 8" Velcro strap or a 2.5" spring clamp to hold down the trigger on the saw. These options can easily be removed when the saw is not mounted in the SWAG Portaband table.



8) Saw Mounting Options:

The Tradesman table is designed to be mounted in any 2" receiver, clamped to a Tri-stand "tripod", table mounted vice, or any pipe chain vice. There are two 5/8" holes in the receiver tube to accommodate different bumper offsets.

