




JD-2 Notchmaster Reach Around Arm Installation Instructions

Install the new arm in the factory hole with the degree indicator at zero degrees. Using the new hole to the left on the Reach Around Arm as a template, mark the location of the ½” dia hole to be drilled in the tube notcher. Then install the new arm with the provided fasteners. It’s that easy.

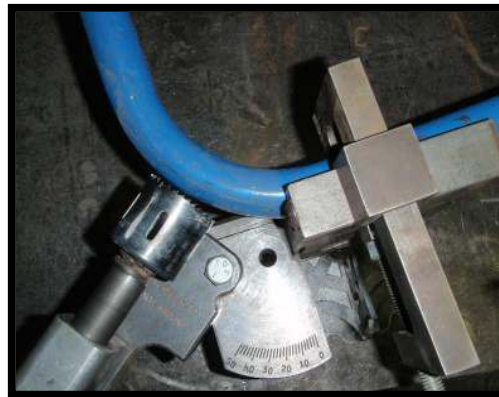

Thanks for the order, and be sure to visit Swag Off Road on [Facebook](#).

INNOVATIVE FABRICATION TOOLS & OFFROAD EQUIPMENT



The advertisement features a collage of various off-road equipment and tools. On the left is a Porta-band Stand. In the center is a Drop Down Tailgate. To the right is a DIY Press Brake. Further right are HF Tubing Rollers. On the far right is a Baja Bin. The background is a dark, textured surface with a yellow and black color scheme.

Porta-band Stand Drop Down Tailgate DIY Press Brake HF Tubing Rollers Baja Bin

541-915-2775

JOIN US ON  facebook WWW.SWAGOFFROAD.COM



WWW.SWAGOFFROAD.COM

“DOING ORDINARY EXTRAORDINARY”